

AODELAN Wired Remote Shutter Release

RS-C6 / RS-C8 / RS-N8 / RS-N10 / RS-S6 / RS-S8 / RS-P6 / RS-O6 / RS-F6

User Manual

Thank you for purchasing an AODELAN product.

AODELAN RS series have all the functions of a camera's shutter release button. Using a wired remote shutter release is an easy way to avoid camera shake and is useful in many shooting situations.

Please read this user manual as well as the user manual provided with your camera which works with RS series before use.

For your safety


Before using your product, please read the following safety precaution carefully to ensure correct and safe use.

- Do not disassemble or attempt to repair it.
- Do not use the product in the presence of flammable or explosive gas.
- The product is not waterproof. Please keep away from rain, snow and high humidity conditions.
- Do not expose the product to high temperature over 45°C (e.g. left in a car trunk).
- Do not clean the product with organic solvent or alcohol-based liquid.
- Keep the product out of the reach of children.

FCC Interference Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Parts(Figure 1)

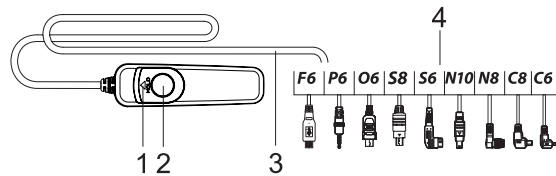


(Figure 1)

1. Shutter Release Button
2. Shutter Release Button lock
3. Cord
4. Plug

Connecting to the camera (Figure 2)

1. Turn the camera off.
2. Open the terminal protective cover of the camera.
3. Insert the plug into the remote control terminal with the mark on the plug facing the mark on the terminal (if available).
4. Turn the camera on.

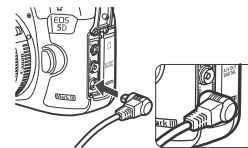

(Figure 2, shows RS-C8 and Canon® EOS 5D Mark III as the example.)

Precautions for Use


- Check the type of remote control terminal of your camera; choose to use the correct RS model.
- Do not use force while inserting the plug.
- Do not pull the Shutter Release or carry the camera by it while the cord is connected to the camera. Failure to observe this precaution could result in damage and the cord becoming disconnected.
- Turn the camera off before disconnecting Shutter Release from the camera.

Using (Figure 3)

1. Press the shutter release button halfway to activate the camera's autofocus. (The camera needs to be set to autofocus.)
2. Press the shutter release button fully to take a picture.
3. Press the shutter release button fully and slide the button lock in the direction of the arrow to lock the

shutter release button for long exposure shooting (the camera's shutter needs to be set to Bulb) or continuous shooting (the camera needs to be set to continuous shooting).

4. To release the lock, slide the button lock in the opposite direction.

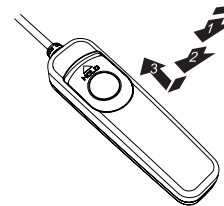

(Figure 3)

Specifications

Dimensions: Approx. 98 x 28 x 20 mm (3.9 x 1.1 x 0.8 in.) (Excluding Cord)

Weight: Approx. 52g (1.8 oz) (The weight of different RS model varies slightly)

Total length: Approx. 1m (39.4 in.) (Including Cord and Plug)

Specifications and design are subject to change without notice.

Canon® mentioned in the manual is a protected trademark which does not belong to Shenzhen Aodelan Technology Co., Ltd.