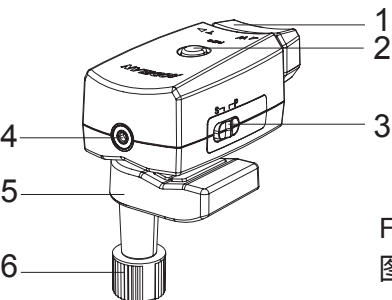 
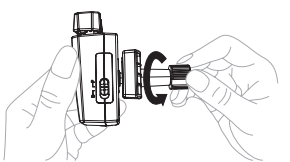 
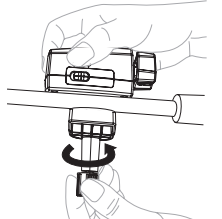 
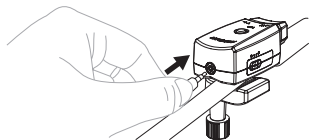 
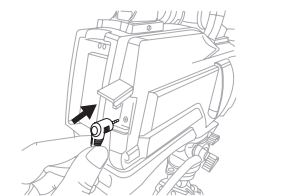 
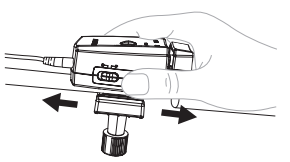 
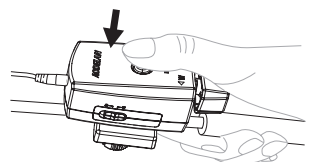 
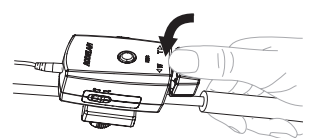 


AODELAN		English	简体中文
Camcorder Zoom Controller ZC-1 User Manual		摄像机变焦控制器 ZC-1 使用说明书	
		Figure 1 图一	
		Figure 2 图二	
		Figure 3 图三	
		Figure 4-a 图四 -A	
		Figure 4-b 图四 -B	
		Figure 5 图五	
		Figure 6 图六	
		Figure 7 图七	
<p>Thank you for purchasing an AODELAN product.</p> <p>AODELAN Camcorder Zoom Controller ZC-1 provides record and zoom control for Sony, Canon and Panasonic camcorders equipped with a LANC terminal. ZC-1 can be operated by attaching it to the pan handle on the tripod using the mounting clamp provided. With the built-in pressure-sensitive rocker switch, you can regulate the zoom fast or slowly depending on how hard or gentle you press it.</p> <p>Please read this user manual as well as the user manual provided with your camcorder which works with ZC-1 before use.</p> <p>For your safety</p> <p>Before using your product, please read the following safety precaution carefully to ensure correct and safe use.</p> <ul style="list-style-type: none">● Do not disassemble or attempt to repair it.● Do not use the product in the presence of flammable or explosive gas.● The product is not waterproof. Please keep away from rain, snow and high humidity conditions.● Do not expose the product to high temperature over 45°C (e.g. left in a car trunk).● Do not clean the product with organic solvent or alcohol-based liquid.● Do not overly tighten the clamp. Doing so may cause damage. <p><i>RED 2014/53/EU</i> Declaration of Conformity EC</p> <p>Hereby, Shenzhen Aodelan Technology Co., Ltd. declares that this product is in compliance with essential requirements and other relevant provisions of Directive 2014/53/EU. This product can be used across EU member states. A copy of the Declaration of Conformity can be found at www.aodelan.net.</p> <p>Parts (Figure 1)</p> <ol style="list-style-type: none">1. Zoom Lever (with pressure-sensitive rocker switch) (<W> Wide-angel, <T> Telephoto)2. Record Button <REC>3. Camcorder Change Over Switch (<S> for Sony or Canon camcorders, <P> for Panasonic camcorders)4. LANC Jack (2.5mm)5. Clamp6. Clamp Knob <p>Attching the Camcorder Zoom Controller</p> <ol style="list-style-type: none">1. Rotate the clamp knob on the Camcorder Zoom Controller counterclockwise as far as required to insert the pan handle on the tripod. (Figure 2)2. Align the center of the pan handle with the V		<p>groove on the clamp, and rotate the clamp knob clockwise to lock it firmly. (Figure 3)</p> <p>Precautions for Use</p> <ul style="list-style-type: none">● Depending on the pan handle attached, the Camcorder Zoom Controller may make contact with the grip of the pan handle when it is in use. Set the Camcorder Zoom Controller a little apart from the grip. <ol style="list-style-type: none">3. Be sure the camcorder is turned off; insert one end of the remote cord into the Camcorder Zoom Controller's LANC jack (Figure 4-a) and the other end into the camcorder's LANC terminal* (Figure 4-b). <p><i>*Refer to the user manual of the camcorder for the location of the LANC terminal on the camcorder.</i></p> <p>Using the Camcorder Zoom Controller</p> <ol style="list-style-type: none">1. Move the camcorder change over switch to the correct position (Figure 5) - <S> for Sony or Canon camcorders, <P> for Panasonic camcorders.2. Turn on the camcorder and set it to record images. ** <p><i>**Refer to the user manual of the camcorder for further information.</i></p> <ol style="list-style-type: none">3. Press the red record button to start recording. (Figure 6) Press it again to stop recording.4. Use the zoom lever to control the zoom function. (Figure 7)<ul style="list-style-type: none">● Press the side of the lever marked <W> to zoom out to a more wide-angle view, the subject appears farther away.● Press the side of the lever marked <T> to zoom into to a more telephoto view, the subject appears closer.● Pressing the zoom lever gently, the camcorder zooms at a slow speed; pressing the zoom lever with more force accelerates the zoom speed, the camcorder zooms quickly.	<p>感谢您购买奥德兰产品。</p> <p>AODELAN 摄像机变焦控制器 ZC-1 可为配备 LANC 端口的索尼、佳能以及松下摄像机提供录制和变焦控制。ZC-1 可通过其装备的夹钳安装在三脚架的遥摄杆上进行操作。内置有压力感应摇臂开关，可根据你的按压力度快速或缓慢地调节变焦。</p> <p>使用前，请阅读本使用说明书以及与 ZC-1 搭配使用的摄像机随附的使用说明书。</p> <p>安全须知</p> <p>请在使用前仔细阅读“安全须知”，并以正确的方法使用。</p> <ul style="list-style-type: none">● 请勿试图自行拆开或进行维修。● 请勿在有可能起火、爆炸的场所使用本产品。● 本产品不具备防水特性，请远离雨、雪等高湿度的场合。● 请勿将产品放置在超过 45℃ 的高温环境下，比如汽车尾箱内。● 请勿使用有机溶剂或含酒精的液体来清洁该产品。● 请勿过度拧紧夹钳。这样做可能会造成损害。 <p>部件（图一）</p> <ol style="list-style-type: none">1. 变焦杆（带压力感应摇臂开关）（<W> 广角，<T> 长焦）2. 录像按钮 <REC>3. 摄像机切换开关（<S> 用于索尼或佳能摄像机，<P> 用于松下摄像机）4. LANC 插孔（2.5mm）5. 夹钳6. 夹钳旋钮 <p>安装摄像机变焦控制器</p> <ol style="list-style-type: none">1. 逆时针旋转摄像机变焦控制器上的夹钳旋钮直至可以插入三角架的遥摄杆。（图二）2. 将遥摄杆的中心与夹钳上的 V 形凹槽对齐，然后顺时针旋转夹钳旋钮将其锁紧。（图三） <p>使用注意事项</p> <ul style="list-style-type: none">● 根据所安装的遥摄杆，摄像机变焦控制器在使用时可能会触碰到遥摄杆上的手把。将摄像机变焦控制器与手把稍微分开。 <ol style="list-style-type: none">3. 确保摄像机已关机；将遥控线的一端插入摄像机变焦控制器的 LANC 插孔（图四 -A），另一端插入摄像机的 LANC 端子（图四 -B）。* <p><i>* 关于摄像机上的 LANC 端子位置，请参阅摄像机的使用说明书。</i></p> <p>使用摄像机变焦控制器</p> <ol style="list-style-type: none">1. 将摄像机切换开关拨到正确位置（图五） - <S> 用于索尼或佳能摄像机，<P> 用于松下摄像机。2. 开启摄像机并将其设置为录制图像。 ** <p><i>** 有关详细信息，请参阅摄像机的使用说明书。</i></p>
			<p>3. 按红色录像按钮开始录制。（图六）再按此按钮可停止录制。</p> <p>4. 使用变焦杆控制变焦功能。（图七）</p> <ul style="list-style-type: none">● 按下标有 <W> 的变焦杆一侧可以缩小到更广角的视图，被摄主体显得逐渐变远。● 按下标有 <T> 的变焦杆一侧可以放大到更长焦的视图，被摄主机显得逐渐靠近。● 轻按变焦杆时，摄像机以慢速变焦；用更大的力度按压变焦杆可以加快变焦速度，使摄像机快速变焦。 <p>规格</p> <p>接口：LANC 插孔（2.5mm） 尺寸：约 86 x 55 x 92mm 重量：约 102 g（不含遥控线） 配件：遥控线（2.5mm – 2.5mm 插头） 1 条 转接线（2.5mm 母头 – 索尼 AVR）1 条</p> <p>规格和设计如有变更，恕不另行通知。 本说明书中所提到的“索尼”、“佳能”、“松下”是受保护的商标，不属于深圳市奥德兰科技有限公司。</p> <p>深圳市奥德兰科技有限公司 Shenzhen Aodelan Technology Co.,Ltd. www.aodelan.net Printed in China</p>