


# E3<sup>+</sup>

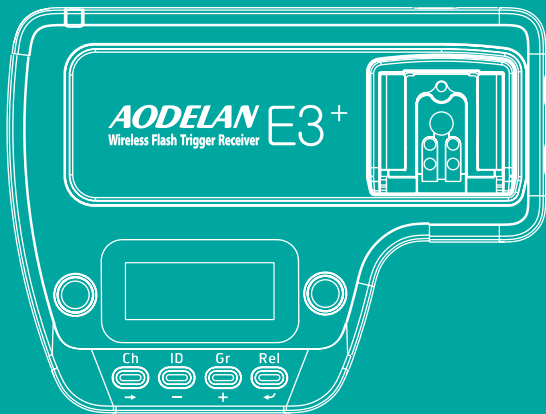

**Wireless Flash Trigger Receiver**  
**无线电引闪接收器**



## Thank you for purchasing Aodelan product.

**Note:** Before using the E3<sup>+</sup> Wireless Trigger for Canon, please read this instruction manual carefully. Please also note to upgrade its firmware to the latest version following the instructions provided on [www.aodelan.net](http://www.aodelan.net). (To check the firmware version, please see page 9).

## Warnings

1. This product is a precise electronic instrument. Do not expose to damp environments or dust.
2. Please shut down the power of all devices when installing the wireless trigger.
3. Do not drop or crush.
4. Do not use the wireless trigger at flammable, explosive or high temperature environment.
5. Do not use harsh chemicals or solvents to clean the body. Use a soft cloth or lens paper.
6. Remove batteries from the wireless trigger if not being used for an extended period.
7. Interference: The E3<sup>+</sup> wireless trigger transmits radio signals at 2.4GHz. Its performance can be affected by electrical current, magnetic fields, radio signals, wireless routers, cellular phones, and other electronic devices. Environmental objects, such as large buildings or walls, trees, fences, or cars can also affect transmission performance. If your wireless trigger can't be triggered, move its location slightly.

## **FCC Interference Statement:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## **FCC Radiation Exposure Statement:**

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

## **NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **E3<sup>+</sup> Wireless Trigger For Canon/Receiver**



E3<sup>+</sup> receiver is a receiver for wireless flash shooting, used to work with non-wireless Canon ETTL Speedlites and thus to perform wireless radio receiving function. The receiver is compatible with multiple wireless radio transmitting devices, including Aodelan E3<sup>+</sup> transmitter, Canon ST-E3-RT Speedlite transmitter, and Canon Speedlites that are compatible with radio transmission wireless shooting.

# Table of Contents

<b>I. Parts</b>	5
<b>II. Preparation Before Use</b>	6
<b>III. The LCD Display</b>	11
<b>IV. Wireless Flash Shooting: Radio Transmission</b>	12
<b>V. Trouble Shooting Guide</b>	17

# I.Parts



1. Radio transmission confirmation lamp
2. LCD panel
3. Power button
4. Function button 1
5. Function button 2
6. Function button 3
7. Function button 4
8. Test flash button
9. Hot shoe mount
10. Batter compartment
11. Cold shoe/Tripod lug
12. Locking ring
13. 5V DC power port
14. 3.5mm output port
15. USB port

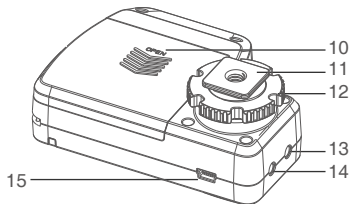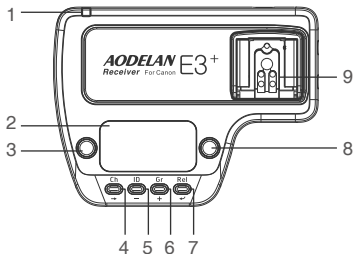

## II. Preparation Before Use

### Installing the Batteries

1. Press the battery compartment cover and slide it down as shown to open the battery cover.
2. Insert the batteries. Make sure the “+” and “-” battery contacts are correctly oriented as shown. (Note: Please use 2 pieces of AA alkaline batteries or AA type NI-MH batteries.)
3. Replace the battery cover and push back into the locked position.
4. When the power icon on the LCD screen displays insufficient power, replace the batteries with new ones.

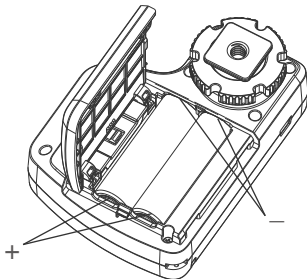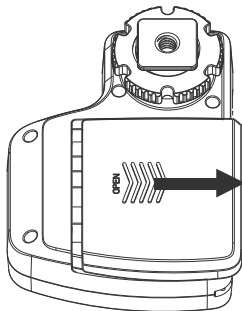




## Attaching and Detaching the E3<sup>+</sup> Receiver


### Attaching the flash to the E3<sup>+</sup> Receiver

1. Align the flash's hot shoe and the E3<sup>+</sup> receiver's hot shoe mount.
2. Slide the flash all the way into the E3<sup>+</sup> receiver's hot shoe mount
3. Lock the flash with the flash's locking mechanism.

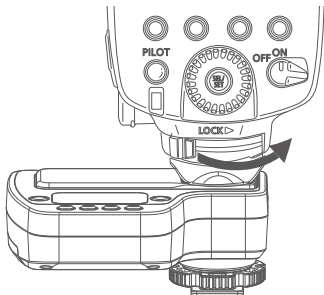

### Detaching the flash

1. Release the lock of flash according to its locking mechanism (see picture).
2. Slide the flash out of E3<sup>+</sup> receiver's hot shoe mount.

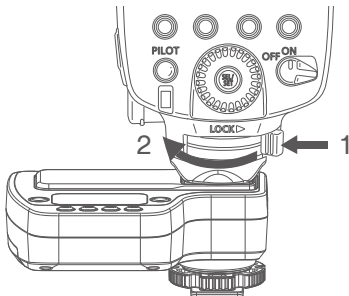

## Turn On/Off the E3<sup>+</sup> Receiver

1. Turn On: Press and hold the power button until MENU interface is displayed on screen.
2. Turn off: Press and hold the power button until the LCD screen goes blank.

## USB Port

The firmware of E3<sup>+</sup> receiver can be upgraded via the USB port, so as to adjust its parameter and extend its compatibility with cameras to come in the future.

1.1 Connect the USB cable to the computer and the other end of the USB cable to E3<sup>+</sup> receiver's USB port. A mobile device icon will be displayed on the computer when successfully connected.

1.2 Double click to start the upgrade software. The upgrade software can be used to check version info, and upgrade the Base software, RF software and Icon.

Click "Version" icon, the current version information of the connected E3<sup>+</sup> transmitter will be displayed in the software window.

Click "Base software" icon, locate and double click on the FDS file from the pop-out window. Then it starts loading the new firmware.

Click "RF software" icon, locate and double click on the RFC file from the pop-out window. Then it starts loading the new firmware.

Click "Icon" icon, locate and double click on the FIF file from the pop-out window. Then it starts loading the new firmware.

1.3 The status of the upgrade will be displayed in the process bar. When completed, an "Updata OK" will be displayed at the bottom of the upgrade software window, and an "update OK" will be displayed on the receivers' LCD screen. Upon completion, disconnect the USB cable and restart the E3<sup>+</sup> receiver.


**Note:**

Please ensure stable power supply when attempting to upgrade the E3<sup>+</sup> receiver. Loss of computer power during the upgrade process could fail the upgrading.

## Checking Version Info on E3<sup>+</sup> Receiver

You can check present version information on the E3<sup>+</sup> receiver: while pressing power button to turn on the E3<sup>+</sup> receiver, press function button 1, 2 or 3 spontaneously until relevant version info is displayed on the LCD screen. Function button 1, 2 and 3 is respectively corresponding to base hardware & software version, RF hardware & software info, and Icon version.

## Test Firing:

E3<sup>+</sup> receiver supports test firing function. You can trigger the flash attached to E3<sup>+</sup> receiver by pressing test button<  > on the receiver.

## Attaching the E3<sup>+</sup> Receiver to Studio Lights or Flashes by Cable


- 1) Turn off the flash/strobe and the E3<sup>+</sup> receiver
- 2) Connect a cable to the receiver's 3.5 mm output port
- 3) Connect the opposite end of the cable to a flash or studio strobe
- 4) Turn on the flash/strobe and E3<sup>+</sup> receiver
- 5) Set the flash to Manual mode – no ETTL functions can be used when a compatible flash is triggered by cable.

## Lock Function

While the E3<sup>+</sup> receiver is on, press and hold power button and function button 1 simultaneously for 2 sec to enable lock function. The function can disable receiver's button operation. And "LOCK!" will be displayed on the LCD screen. Use this to prevent the receiver function settings from being accidentally changed after you set them.

Again press and hold power button and function button 1 simultaneously for 2 sec, you can disable the lock function.

### III.LCD Display

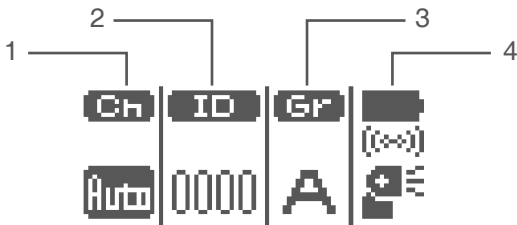

1		Transmission Channel	Ch.1~Ch.15and Auto
2		Wireless radio ID	0000~9999
3		Firing group	Up to five groups (A/B/C/D/E)
4		Battery power state	-
5		Slave units and master unit in communication	-
6		E3+ receiver in communication with flash that attached to its hot shoe mount	-

## IV. Wireless Flash Shooting: Radio Transmission

Note:

The transmitter attached to the camera is called the master unit, E3<sup>+</sup> receiver and a flash that is wirelessly controlled is called the slave unit.

### Wireless Flash Shooting

Set the master unit and E3<sup>+</sup> receiver's to exactly the same channel and ID, and the flash mounted on E3<sup>+</sup> receiver set to ETTL mode, the flash (slave) will fire at the flash mode and flash output set on the master unit. Flash exposure compensation and other settings set on the master unit will be automatically set in the flash (slave). You don't need to operate the slave unit.

E3<sup>+</sup>receiver can be used to receive wireless radio signal transmitted from E3<sup>+</sup> transmitter, Canon ST-E3-RT Speedlite Transmitter or Canon flashes that is compatible with wireless radio transmission.

### Flash Mode

E3<sup>+</sup>receiver supports two flash modes: ETTL and M

1. When the master unit is set to ETTL, you can shoot with advanced wireless flash lighting in the same way as normal E-TTL II/E-TTL auto flash

shooting;

2. When the master unit is set to M, slave unit fires at the set flash output
3. When the master unit is set to Gr, you can shoot with a different flash mode (ETTL/M/ OFF)for each group(A/B/C/D/E).

Note:

- 1) After connecting flash with E3<sup>+</sup>receiver, please firstly turn on the flash, set the flash mode to ETTL, and lastly turn on the receiver.
- 2) During wireless shooting, do not operate the flash.
- 3) E3<sup>+</sup> receiver does not support Multi flash mode.
- 4) E3<sup>+</sup>receiver does not support Ext.A flash mode.

## Setting the Slave Units

### 1. Setting firing group for save units

Set the firing group for slave units (up to 15 units) accordingly with the setting of master unit.

Master Unit		Slave Unit
ETTL/M	Ratio OFF	Set A, B or C as the firing group. If set to D or E, flash will not be triggered
	Ratio A:B	Set A or B as the firing group. If set to C, D or E, flash will not be triggered
	Ratio A:B C (ETTL) / Ratio A:B:C (M)	Set A,B or C as the firing group
Gr		Set A, B, C, D or E as the firing group. Each group will fire at a flash mode accordingly with how it is set on the master unit.: ETTL/M/OFF

Setting the firing group:

Press function button 3 < G<sub>r</sub> >, the firing group parameter will flash on the LCD; press function button 2 < - > or 3 < + > to select from A/B/C/D/E; press power button or function button < ↵ > to exit the setting.

## 2. Setting transmission channel and wireless radio ID for slave units

Please make sure master unit and slave units are set to the same transmission channels and wireless radio IDs. If the transmission channels and wireless radio IDs of the master unit and slave unit are different, the slave unit does not fire.

Setting the transmission channel: press function button 1 < C<sub>h</sub> >, the





transmission channel parameter will flash on the LCD; press function button 2 < - > or 3 < + > to select from Ch. 1-15 or Auto; press power button or function button 4 < ↶ > to exit the setting.

Setting the wireless radio ID: press function button 2 < ID >, the thousands digit will flash on the LCD; press function button 1 < → > to select the ID digit to set; press function button 2 < - > or 3 < + > to select ID number from 0-9; press power button or function button 4 < ↶ > to exit setting for each digit.

### **3.Positioning the flash and camera**

Position the camera and flash within the range of wireless radio transmission.

### **4.Check the transmission status**

Check that the radio transmission confirmation lamp is lit green. Icons  and  are displayed on the receiver's LCD screen.

The color of radio transmission confirmation lamp changes depending on the transmission status of the master unit and the slave unit.

Color	Status	Description	Action
Green	Lit	Transmission OK	—
Red	Lit	No connected	Check the channel and ID
	Blinking	Too many units	Master Units + slave units = 16units or less
		Error	Turn the power off and on again
Blue	Lit	Shortly lit when E3 <sup>+</sup> receiver sends flash or remote release order	

## 5. Check the operation

Press the master unit's test flash button (charge lamp). The slave unit flash will fire. If not, check that it is placed within the operation range.

### Remote Release

While performing wireless shooting, you can release camera shutter remotely from slave unit that using E3<sup>+</sup> receiver. Simply by pressing function button 4 < Rel > on the E3<sup>+</sup> receiver, you can perform remote release (remote control shooting). For master unit operations, see instruction manual of E3<sup>+</sup> transmitter, Canon ST-E3-RT Speedlite transmitter or flash based on personal choice of transmitting devices.

## V. Technical Specification

Type	Wireless Trigger For Canon/Receiver
Compatible cameras	EOS type-A camera compatible with E-TTL II /E-TTL autoflash
Exposure control system	E-TTL II/E-TTL auto, manual flash
Frequency	2405~2475Hz
Channel	Auto, Ch.1~15
Wireless radio ID	0000-9999
Slave unit control	Up to 5 groups(A/B/C/D/E), up to 15 units
Transmission distance	100m+
Power source	2 x AA alkaline batteries or AA NI-MH batteries; 5V DC(External power port)
Receiving current	≤70mA
Max. operating current	≤80mA
Dimension	(L×W×H): L(93×70×47.5)mm
Weight(approx.)	93.3g(Excluding the batteries)

Please note: Product specifications and external design are subject to change without further notice.

# Warranty Terms

1. In case of product malfunctions, the Three Guarantees service ( for refunding, free repair, replacement) will be available on condition that customer provides valid purchase invoice and the Three Guarantees certificate ( the Three Guarantee certificate should be filled by customer in the purchase and sealed by the dealer for it to take effect) .
2. The main unit of product comes with a 1 year warranty from the date of purchase.
3. New firmware will be available for download on aodelan.net. Customer can look for firmware upgrades on the website.
4. For other terms, please refer to details of the Three Guarantees policy.

## **The Warranty Does Not Apply to:**

1. Failure to provide invoice, the Three Guarantee certificate, and other proof to prove that the product is within warranty time of the Three Guarantee service.
2. The main unit, invoice or the content of the Three Guarantees certificate is inconsistent with the physical goods or has been altered.
3. The main unit and accessories had been subject to abnormal usage or misuse. Abnormal situations include but not limited to: improper storage, unauthorized demolition or alteration, improper installation and damages due to elements not caused by the product itself.
4. Damage caused by misuses such as water or external force damage and etc.
5. Damage caused by improper usage, maintenance or transportation in

failure to follow the product's manual instructions.

6. Damage caused by force majeure such as earthquake, flood, war and etc.

7. Situations that do not conform to the Three Guarantees policy, or other relevant national laws and regulations.

**In case of product malfunctions, please handle by following the procedures:**

1. Log in [www.aodelan.net](http://www.aodelan.net) and contact AODELAN Customer Service Center to confirm whether the product needs to be returned for repair. The shipping cost to send back the product will be at customer's expense (AODELAN Customer Service Center's reply shall prevail).

2. If you have problems concerning the product usage, please submit inquiry on the website. Technical advisory service will be provided.

3. When the product is confirmed to require repair, the products should be properly packaged and sent back to Aodelan company or authorized service center (find the mailing address on the website). Detailed description of the issue, customer's name, contact number and postal address should be provided along with the package.

\* The AODELAN Customer Service Center reserves all the rights to explain the above after-sale & warranty terms. Please pay attention to the latest website announcement.

## Accessory List

Aodelan E3 <sup>+</sup> Receiver	1 PC
AA Battery	2 PCS
Manual	1 PC
QC Certificate	1 PC

\*Please check the package according to the accessory list.



[www.aodelan.net](http://www.aodelan.net)